

# Instructions


## UNDERMOUNT SINKS

### BEFORE INSTALLING

- Due to the nature of the installation, undermount sinks should be installed by trained and experienced installers.
- Do not use adhesives or adhesive sealants with this product.
- Inspect the waste and supply tubing; replace if necessary.
- Install so future removal from underneath the countertop is possible to avoid damage to the countertop.
- Prior to installation, unpack the sink and inspect it for damage. Return it to its carton until you are ready to install it.
- Observe all local plumbing and building codes.


### PARTS :

A	Wood Screws	x4
B	Wood Screw Washers	x4
C	Anchors	x4
D	Metal Nuts	x8
E	Metal Washers	x8
F	Setting Tool	x1
G	Clamps	x4

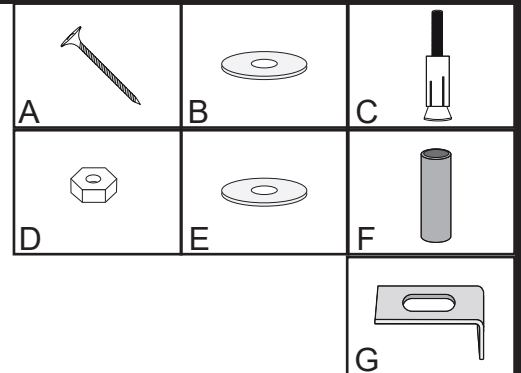

### TOOLS AND MATERIALS REQUIRED :

A	Drill
B	Jig Saw
C	Measuring Tape
D	Pencil
E	Screw Driver
F	Sealant
G	Hammer

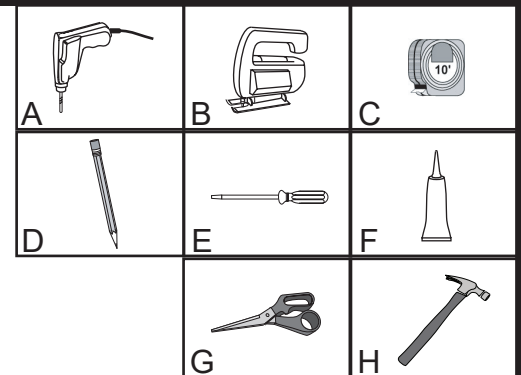

STEP-BY-STEP  
ILLUSTRATED

# Instructions

UNDERMOUNT SINKS

## INSTALLATION PROCEDURE

- 1**
  - Check the desired sink location for clearance between the backsplash, faucet, fixture and cabinet.
  - Cut out the template.
  - Carefully position and trace the template on the countertop as directed on the template. (Figure 1)
  - Mark the faucet hole centerline on the countertop. (Figure 2)
  - Drill a  $\frac{1}{2}$ " pilot hole on the inside of the cut line. (Figure 3)
  - Cut out the countertop opening with a jig saw. (Figure 4)
- 2** For wood countertops:
  - Drill a  $\frac{1}{2}$ " pilot hole on the inside of the cut line. (Figure 3)
  - Cut out the counter top opening and faucet holes with a jig saw. (Figure 4)
  - Mark and drill  $\frac{1}{16}$ " (2mm) wood screw holes  $\frac{3}{4}$ " (20mm) deep underneath the counter at the locations shown on the template.
  - Waterproof any exposed areas of wood.
- 3** For marble and granite countertops:
  - Cut out the counter top opening and faucet holes following the template.
  - NOTE: This should be done by a professional.
  - Position the countertop upside down on a soft surface to protect the top of the counter.
  - Mark and drill  $\frac{3}{8}$ " (10mm) holes  $\frac{5}{8}$ " (16mm) deep at the locations shown on the template.
  - Use a setting tool and hammer to secure the anchors. (Figure 5)
- 4** Mount the drain assembly (not provided) on the sink following manufacturer's instructions.
- 5** Apply a continuous bead of quality sealant to the sink rim where it will contact the countertop.
- 6** Position the sink squarely under the cutout and secure the sink to the counter top using clamps and washers. For wood counter tops use wood screws, washers and clamps and for granite or marble counter tops use washers, nuts and clamps to attach the sink to the counter top. (Figure 7) Do not over tighten. NOTE: The screws or anchors provided should be used for counter tops with a minimum 1"(25mm) thickness. For thinner counter tops, use appropriate anchors and fasteners.
- 7** Once sealant has dried fully, re-install the counter top according to manufacturer's instructions if needed.
- 8** Install the faucet (not provided) to the counter top following manufacturer's instructions.
- 9** Connect the water supply line to the faucet and p-trap to drain assembly (not included) (Figure 8). Turn on the water supply and fix it if leaking water is found.

