


Cabinet



Basin




x 2



x 2

INCLUDED

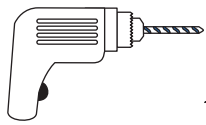


Drill




Silicone




Tape Measure

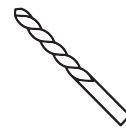

8mm Drill Bit

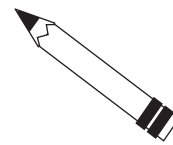

Marker

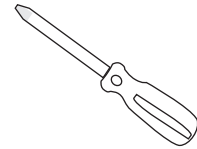


Screwdriver

REQUIRED TOOLS NOT INCLUDED

THINGS TO NOTE:


- INSPECT UNIT AND COMPONENTS BEFORE INSTALLATION
- RECOMMENDED HEIGHT TO TOP OF Cabinet, EXCLUDING THE BASIN IS 800MM
- ENSURE NOT TO DRILL HOLES INTO CONCEALED PLUMBING IN THE WALL
- CHECK THAT TRAPS AND WATER CONNECTIONS ARE UNOBSTRUCTED

1

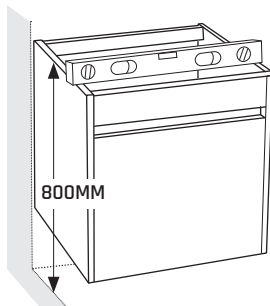


- Ensure unit is level and will fit desired area
- Mark drilling points on the wall
- Drill marked points using a 8mm drill bit

2

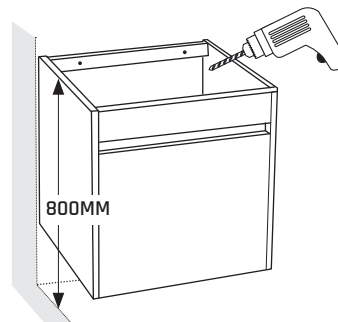

- Screws and wall plugs supplied should be fitted through the pre-drilled holes in cabinet back support
- Fasten cabinet to wall with provided screws
- Fit the basin mixer and waste onto the basin
- Fit outlet trap to outlet point

3

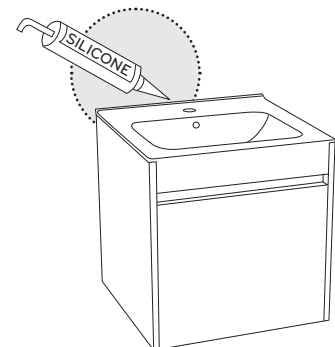

- Place basin on cabinet and silicone together
- Connect trap and mixer and check for any leaks
- Use silicone to seal any gaps between basin and wall
- Allow 24 hours to dry before use